



Lapis

SALICE

Index




Lapis for thicker doors - 94° opening page 4

Lapis - 110° opening page 6

Lapis with Push system - 94° opening page 8




Plates page 10

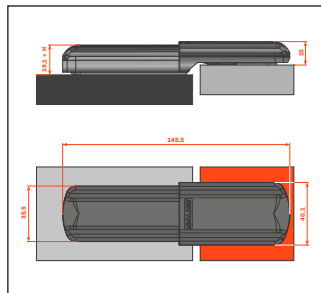

Hinge overall dimensions and sizes page 11



Assembly and disassembly instructions page 12

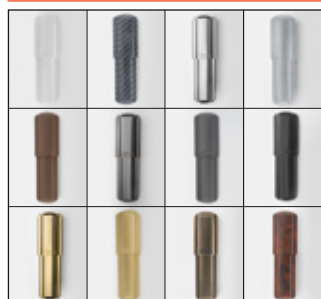

Finishes page 15



Technical information


Silentia hinges with cup integrated decelerating system and cover.

Hinges for min. 18 mm thick doors.
15.5 mm deep cup.

94° opening.
Possible drilling distance on the door (K): from 3 to 9 mm.

Adaptable only with longitudinal Domi snap-on mounting plates (BAP).

Space needed to open the door

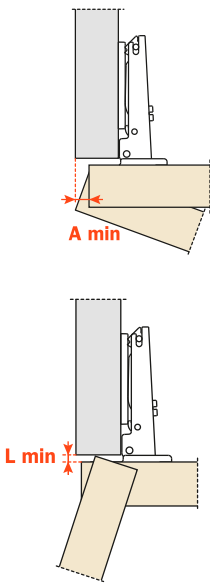


	T=	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
K=3	A=	0.1	0.2	0.3	0.4	0.5	0.7	0.8	1.0	1.6	2.6	3.5	4.5	5.4	6.4	7.4	8.3	9.3
K=4	A=	0.1	0.2	0.3	0.4	0.5	0.7	0.8	1.0	1.2	1.9	2.8	3.8	4.7	5.7	6.6	7.6	8.6
K=5	A=	0.1	0.2	0.3	0.4	0.5	0.7	0.8	1.0	1.2	1.4	2.2	3.1	4.1	5.0	5.9	6.9	7.8
K=6	A=	0.1	0.2	0.3	0.4	0.5	0.6	0.8	1.0	1.2	1.4	1.7	2.6	3.5	4.4	5.3	6.2	7.2
K=7	A=	0.1	0.2	0.3	0.4	0.5	0.6	0.8	1.0	1.1	1.3	1.6	2.1	3.0	3.8	4.7	5.6	6.5
K=8	A=	0.1	0.2	0.3	0.4	0.5	0.6	0.8	0.9	1.1	1.3	1.6	1.8	2.5	3.3	4.2	5.1	6.0
k=9	A=	0.1	0.2	0.3	0.4	0.5	0.6	0.8	0.9	1.1	1.3	1.5	1.8	2.1	2.9	3.7	4.6	5.4

K	3	4	5	6	7	8	9
L=	0.0	0.0	0.0	0.0	0.0	0.3	1.3

The above values are calculated on the assumption that the doors have square edges.
They are reduced if the doors have radiussed edges.


Projection of the door

Projection of the door from the cabinet side at the max. opening.
The figures are based on a straight arm hinge, H=0 mm thickness of mounting plate and K value = 3 mm.



“C” value

With this formula you can obtain the max. thickness of the moulded door that can be opened without touching adjacent carcass sides, doors or walls, whilst bearing in mind the above L-K-T values.

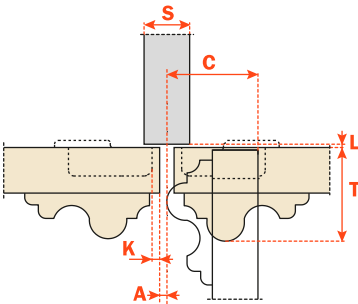


Packing

Boxes 300 pcs.
Pallets 7.200 pcs.


Use these formulas to determine the type of hinge arm, the drilling distance "K" and the height of the mounting plate "H" which is necessary to solve each application problem.

Arm 0

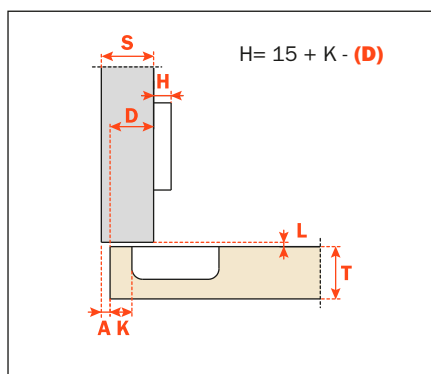


C21BAD9

Arm 9

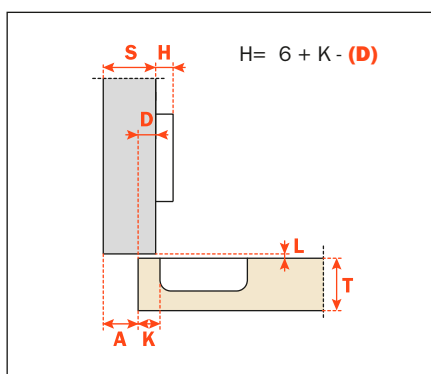

C21BGD9

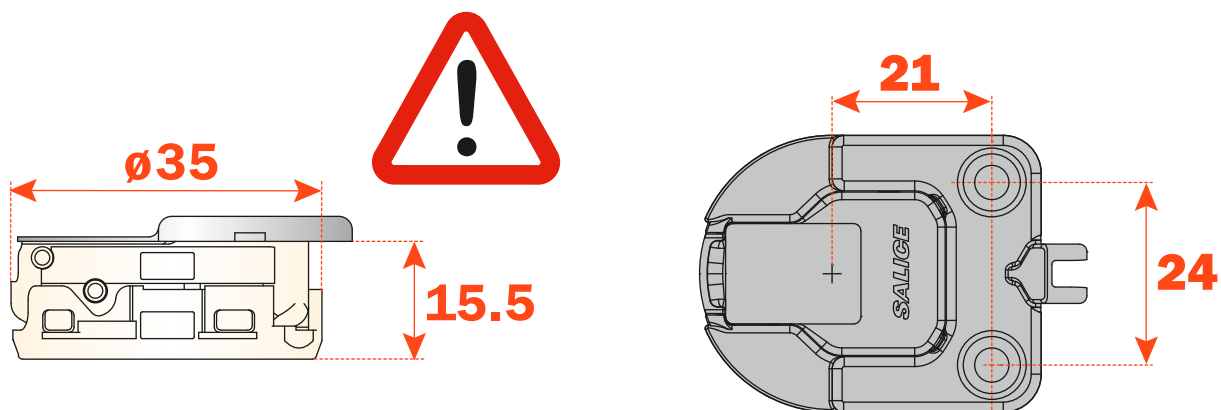



Technical information


Silentia hinges with cup integrated decelerating system and cover.

Hinges for min. 16 mm thick doors.
13.5 mm deep cup.


110° opening.
Possible drilling distance on the door (K): from 3 to 6 mm.

Adaptable only with longitudinal Domi snap-on mounting plates (BAP).

Space needed to open the door

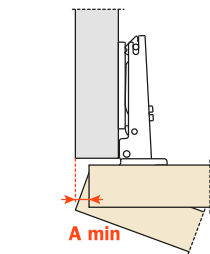

	T=	16	17	18	19	20	21	22	23	24	25	26
K=3	A=	0.7	0.9	1.1	1.3	1.6	1.9	2.2	2.6	3.2	4.4	5.7
K=4	A=	0.6	0.8	1.1	1.3	1.6	1.8	2.2	2.5	2.9	3.4	4.7
K=5	A=	0.6	0.8	1.0	1.3	1.5	1.8	2.1	2.4	2.8	3.2	3.7
K=6	A=	0.6	0.8	1.0	1.2	1.5	1.8	2.1	2.4	2.7	3.1	3.6

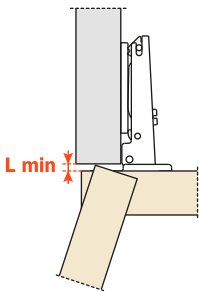


	T=	16	17	18	19	20	21	22	23	24	25	26
K=3	L=	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.2	0.4	0.6	0.9
K=4	L=	0.0	0.0	0.0	0.3	0.5	0.7	0.9	1.1	1.4	1.6	1.8
K=5	L=	0.6	0.8	1.0	1.2	1.5	1.7	1.9	2.1	2.4	2.6	2.8
K=6	L=	1.5	1.8	2.0	2.2	2.4	2.7	2.9	3.1	3.3	3.6	3.8

The above values are calculated on the assumption that the doors have square edges.
They are reduced if the doors have radiussed edges.

Projection of the door


Projection of the door from the cabinet side at the max. opening.
The figures are based on a straight arm hinge, H=0 mm thickness of mounting plate and K value = 3 mm.



“C” value

With this formula you can obtain the max. thickness of the moulded door that can be opened without touching adjacent carcass sides, doors or walls, whilst bearing in mind the above L-K-T values.

$C=22.5 + K + A$

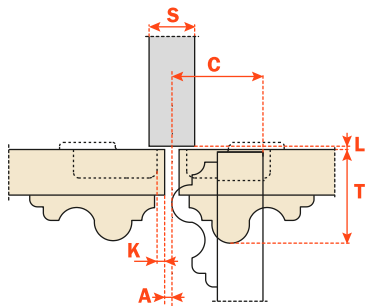


Packing

Boxes 300 pcs.
Pallets 7.200 pcs.


Use these formulas to determine the type of hinge arm, the drilling distance "K" and the height of the mounting plate "H" which is necessary to solve each application problem.

Arm 0

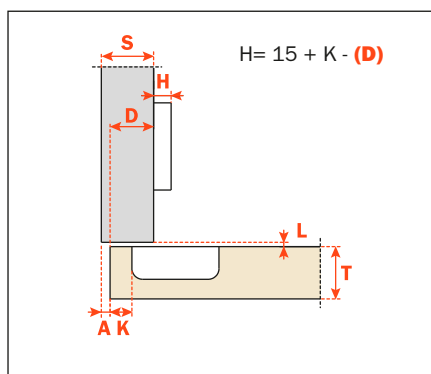


C716AD9

Arm 9

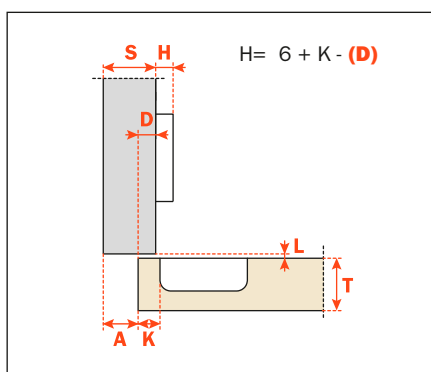

C716GD9

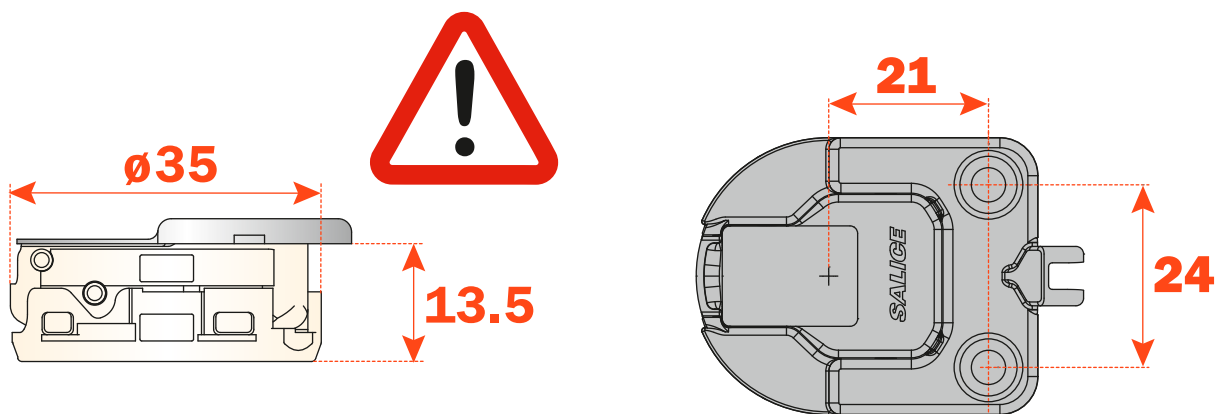




Technical information

Push hinges are equipped with a special spring that acts to open the door independently of the release device.

For thick doors up to 35 mm, with special profiles.
15.5 mm deep metal cup.
94° opening.
Possible drilling distance on the door (K): from 3 to 9 mm.

Adaptable only with longitudinal Domi snap-on mounting plates (BAP).

Space needed to open the door

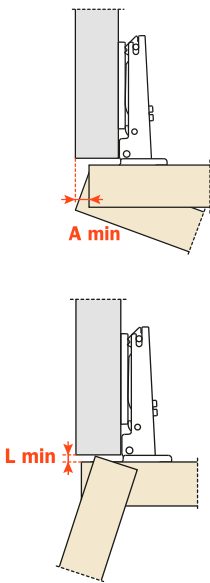


	T=	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
K=3	A=	0.1	0.2	0.3	0.4	0.5	0.7	0.8	1.0	1.6	2.6	3.5	4.5	5.4	6.4	7.4	8.3	9.3
K=4	A=	0.1	0.2	0.3	0.4	0.5	0.7	0.8	1.0	1.2	1.9	2.8	3.8	4.7	5.7	6.6	7.6	8.6
K=5	A=	0.1	0.2	0.3	0.4	0.5	0.7	0.8	1.0	1.2	1.4	2.2	3.1	4.1	5.0	5.9	6.9	7.8
K=6	A=	0.1	0.2	0.3	0.4	0.5	0.6	0.8	1.0	1.2	1.4	1.7	2.6	3.5	4.4	5.3	6.2	7.2
K=7	A=	0.1	0.2	0.3	0.4	0.5	0.6	0.8	1.0	1.1	1.3	1.6	2.1	3.0	3.8	4.7	5.6	6.5
K=8	A=	0.1	0.2	0.3	0.4	0.5	0.6	0.8	0.9	1.1	1.3	1.6	1.8	2.5	3.3	4.2	5.1	6.0
K=9	A=	0.1	0.2	0.3	0.4	0.5	0.6	0.8	0.9	1.1	1.3	1.5	1.8	2.1	2.9	3.7	4.6	5.4

K=	3	4	5	6	7	8	9
L=	0.0	0.0	0.0	0.0	0.0	0.3	1.3

The above values are calculated on the assumption that the doors have square edges. They are reduced if the doors have radiussed edges.

Projection of the door


Projection of the door from the cabinet side at the max. opening. The figures are based on a straight arm hinge, H=0 mm thickness of mounting plate and K value = 3 mm.



“C” value

With this formula you can obtain the max. thickness of the moulded door that can be opened without touching adjacent carcass sides, doors or walls, whilst bearing in mind the above L-K-T values.

C=23 + K + A

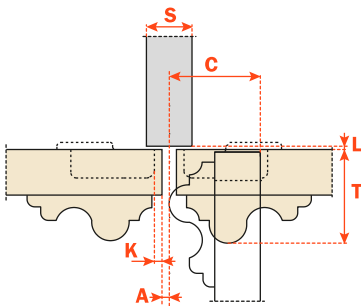


Packing

Boxes 300 pcs.
Pallets 7.200 pcs.


Use these formulas to determine the type of hinge arm, the drilling distance “K” and the height of the mounting plate “H” which is necessary to solve each application problem.

Arm 0

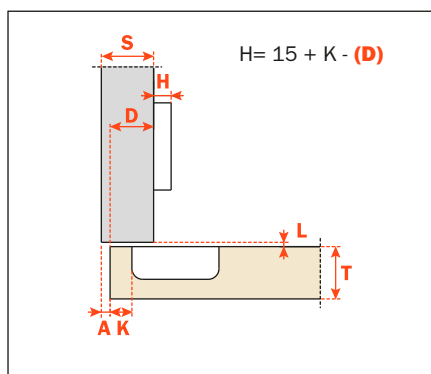


C21VA99

Arm 9

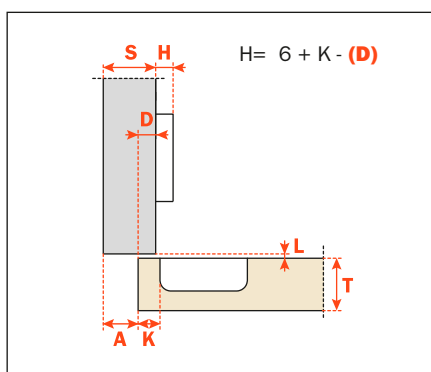

C21VG99

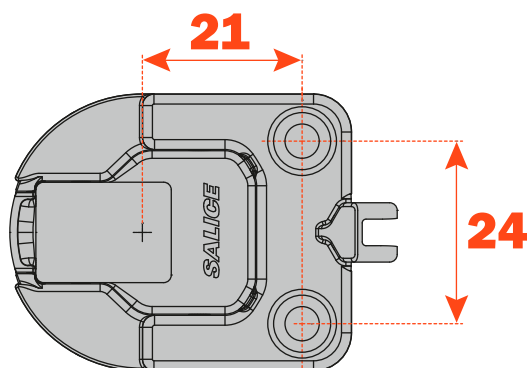

For the complete range of release devices and retaining catches consult Salice general catalogue.

Domi snap-on mounting plates

Packing

Boxes 300 pcs.
Pallets 7.200 pcs.

- 21+32 mm drilling.
- Depth and height adjustment by cam.


BAP3R



Die-cast mounting plates.
Fixing: wood screw.

B 3.5 DIN 7983.

H= 0 1 2 3 4 5 6




BAPGR



Die-cast mounting plates.
Fixing: Euroscrew.
Drilling $\varnothing 5 \times 11$.

H= 0 1 2 3 4 5 6

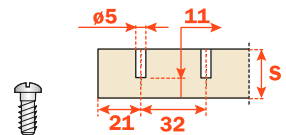


BAPMR




Die-cast mounting plates.
Fixing: expanding dowel.
Drilling $\varnothing 10 \times 11.5$ mm.

H= 0 1 2 3 4 5 6

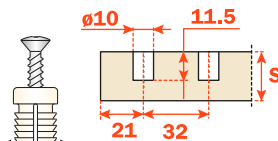


BAP7R

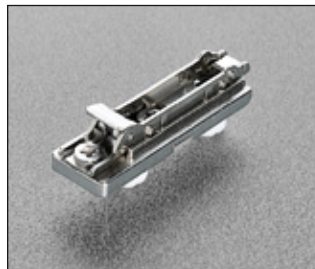


Die-cast mounting plates.
Fixing: knock-in dowel.
Drilling $\varnothing 10 \times 11.5$ mm.


H= 0 1 2 3 4 5 6

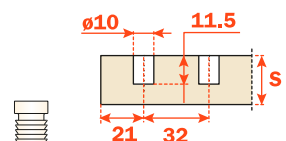


Use mounting plates with 6 mm maximum height

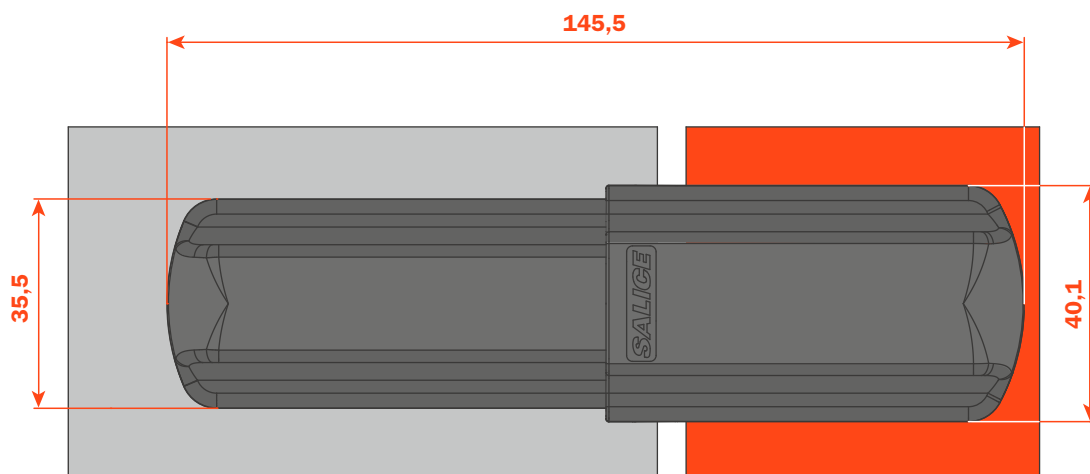

Lapis hinge - 0 arm - 0 mounting plate

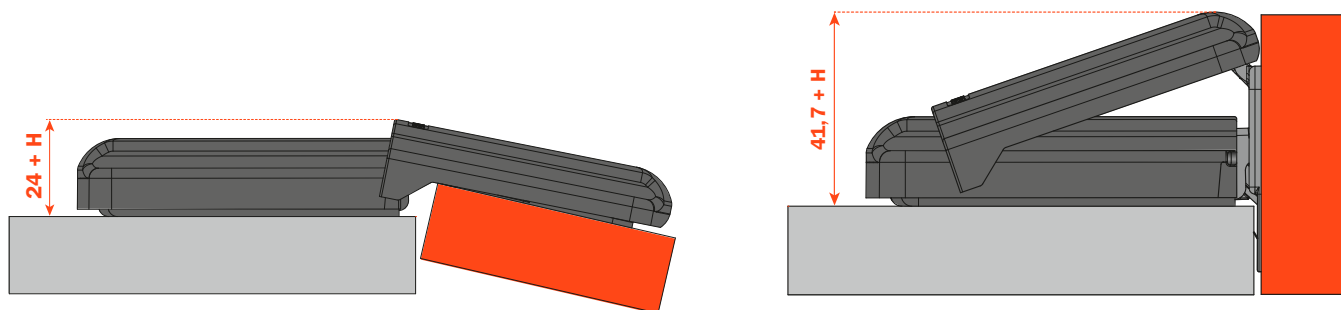

Lapis hinge - 9 arm - 0 mounting plate

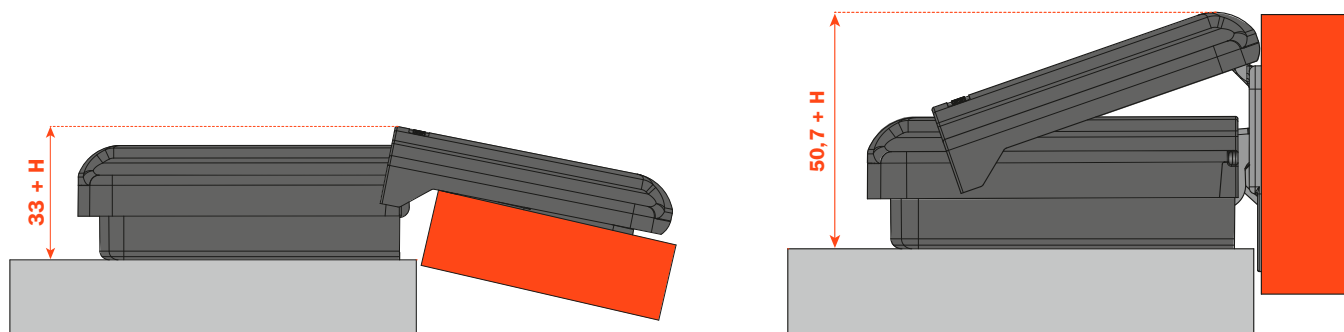

Assembly instructions

After fixing the mounting plate, attach the skirt.

Attached skirt.



Clip the hinge onto the mounting plate.

ATTACHMENT OF THE HINGE ARM COVER



Clip the cover onto the hinge arm.

Press to clip the cover.



ATTACHMENT OF THE DOOR SIDE COVER

Lift the carrier.

Clip the cover onto the carrier.



Half-close the door to ensure that the covers are engaged correctly.



Disassembly instructions


Half-close the door and lift the cover.



Open the door and push the cover firmly in the direction indicated.



Remove the cabinet side cover.

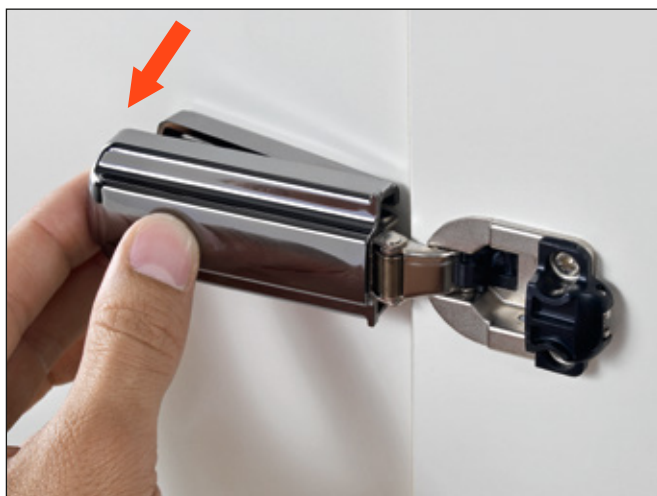

Unclip the hinge from the mounting plate.




Remove the skirt.



P7A0A09 **SATIN CHROME**

Lapis cabinet side - Arm 0

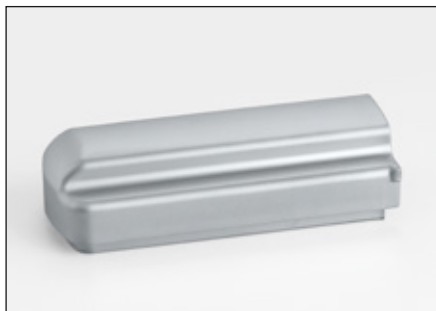

P7A9A09 **SATIN CHROME**

Lapis cabinet side - Arm 9




P7SXA09SN **SATIN CHROME**

Lapis door side




P7A0A10 **SATIN METAL BLACK**

Lapis cabinet side - Arm 0

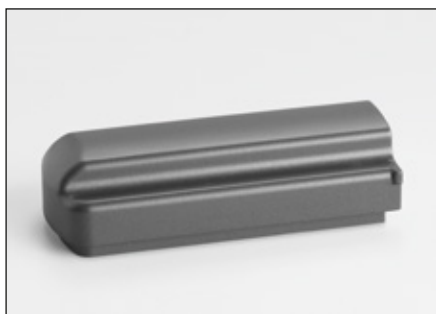

P7A9A10 **SATIN METAL BLACK**

Lapis cabinet side - Arm 9

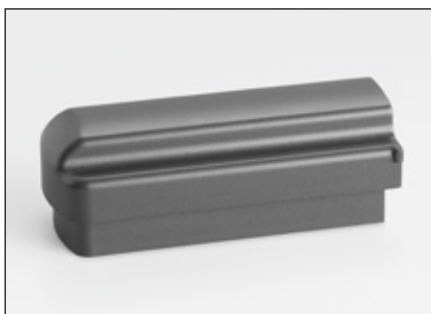

P7SXA10SN **SATIN METAL BLACK**

Lapis door side



P7A0A1W **SATIN GOLD**

Lapis cabinet side - Arm 0



P7A9A1W **SATIN GOLD**

Lapis cabinet side - Arm 9



P7SXA1WSN **SATIN GOLD**

Lapis door side



P7A0A12 **MATT BROWN**

Lapis cabinet side - Arm 0



P7A9A12 **MATT BROWN**

Lapis cabinet side - Arm 9



P7SXA12SN **MATT BROWN**


Lapis door side



Finishes

P7A0A06 **GLOSSY CHROME**

Lapis cabinet side - Arm 0

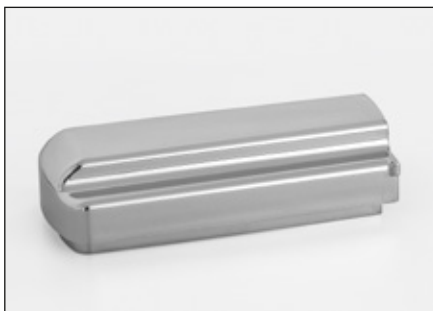

P7A9A06 **GLOSSY CHROME**

Lapis cabinet side - Arm 9



P7SXA06SN **GLOSSY CHROME**

Lapis door side



P7A0A0N **GLOSSY METAL BLACK**

Lapis cabinet side - Arm 0



P7A9A0N **GLOSSY METAL BLACK**

Lapis cabinet side - Arm 9



P7SXA0NSN **GLOSSY METAL BLACK**

Lapis door side



P7A0A08 **GLOSSY GOLD**

Lapis cabinet side - Arm 0



P7A9A08 **GLOSSY GOLD**

Lapis cabinet side - Arm 9



P7SXA08SN **GLOSSY GOLD**

Lapis door side



P7A0AK4 **GLOSSY CARBON**

Lapis cabinet side - Arm 0



P7A9AK4 **GLOSSY CARBON**

Lapis cabinet side - Arm 9



P7SXAK4SN **GLOSSY CARBON**

Lapis door side



P7A0A07 **OLD BRASS**

Lapis cabinet side - Arm 0



P7A9A07 **OLD BRASS**

Lapis cabinet side - Arm 9



P7SXA07SN **OLD BRASS**

Lapis door side



P7A0AKU **GLOSSY MAHOGANY BRIAR-ROOT**

Lapis cabinet side - Arm 0



P7A9AKU **GLOSSY MAHOGANY BRIAR-ROOT**

Lapis cabinet side - Arm 9




P7SXAKUSN **GLOSSY MAHOGANY BRIAR-ROOT**

Lapis door side



P7A0AA3 **BLACK**

Lapis cabinet side - Arm 0

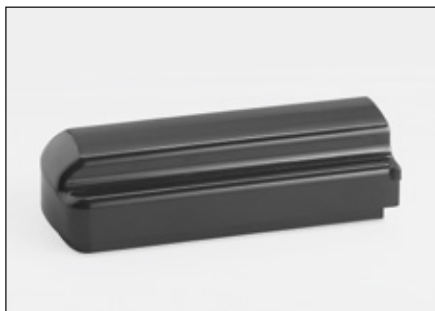


P7A9AA3 **BLACK**

Lapis cabinet side - Arm 9



P7SXAA3SN **BLACK**

Lapis door side

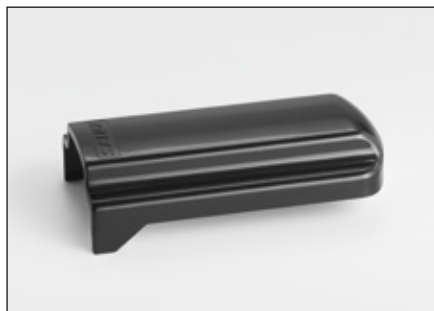


P7A0A11 **MATT WHITE**

Lapis cabinet side - Arm 0



P7A9A11 **MATT WHITE**

Lapis cabinet side - Arm 9

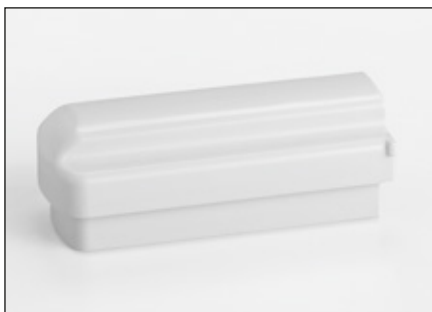

P7SXA11SN **MATT WHITE**

Lapis door side



ARTURO SALICE S.p.A.

VIA PROVINCIALE NOVEDRATESE, 10
22060 NOVEDRATE (COMO) ITALIA
TEL. 031 790424
FAX 031 791508
info.salice@salice.com
www.salice.com

DEUTSCHE SALICE GMBH

RUDOLF DIESEL STR. 10
POSTFACH 1154
74382 NECKARWESTHEIM
TEL. 07133 9807-0
FAX. 07133 9807-16
info.salice@deutschesalice.de
www.deutschesalice.de

DEUTSCHE SALICE GMBH

VERKAUFSBÜRO NORD
RINGSTRASSE 36/A30 CENTER
32584 LÖHNE
TEL. 05731 15608-0
FAX. 05731 15608-10
vknord@deutschesalice.de
www.deutschesalice.de

SALICE FRANCE S.A.R.L.

ROUTE DE GOA ZAC LES 3 MOULINS
06600 ANTIBES
TEL. 0493 330069
FAX. 0493 330141
info.salice@salicefrance.com
www.salicefrance.com

SALICE ESPAÑA, S.L.U.

CALLE COPÉRNICO, 11
POLÍGONO INDUSTRIAL
COLL DE LA MANYA
08403 GRANOLLERS (BARCELONA)
TEL. 938 46 88 61
FAX 938 49 11 97
info.salice@saliceespana.es
www.saliceespana.es

SALICE UK LTD.

KINGFISHER WAY
HINCHINGBROOKE BUSINESS PARK
HUNTINGDON CAMBS PE 29 6FN
TEL. 01480 413831
FAX. 01480 451489
info.salice@saliceuk.co.uk
www.saliceuk.co.uk

SALICE AMERICA INC.

2123 CROWN CENTRE DRIVE
CHARLOTTE NC. 28227
TEL. 704 8417810
FAX. 704 8417808
info.salice@saliceamerica.com
www.saliceamerica.com

SALICE CANADA INC.

4025 SLADEVIEW CRESCENT
UNIT # 7-9
MISSISSAUGA, ONTARIO L5L 5Y1
TEL. 905 8208787
FAX. 905 8207226
info.salice@salicecanada.com
www.salicecanada.com